



Wildog Accessories

Installation instruction

PRODUCT DESCRIPTION:

- Ford next gen front bumper



PRODUCT SAFETY & LEGAL DISCLAIMER

• IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING. FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.

- Review the product package and contents prior to beginning the installation.

Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.

- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third-party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.



Wildog Accessories

Installation instruction

PARTS INCLUDED IN THE LIST:

A	Complete & assembled bumper	1
B	Winch plate	1
C	Radiator Plate	1
D	Eyelids	2
E	M8 x 20 button heads	2
F	M8 x 25 Washers	6
G	M8 nyloc nuts	4
H	M10 x 25 x 3 Washers	8
I	M10 Nyloc Nuts	4
J	M10 x 40 Hex bolts	4
K	M12 x 40 x 1.75 hex bolts	16
L	M12 x 30 x 3 washers	32
M	M12 nyloc nuts	16
N	Set of lights	2

A →



B →



C →



D →





Wildog Accessories

Installation instruction

E →



J →



F →



K →



G →



L →



H →



M →



I →



N →





Wildog Accessories

Installation instruction

Please insure that all parts and fasteners are accounted for before starting the fitment, if any parts are not included please give us a call on [065 100 62525](tel:06510062525) or [074 227 1524](tel:0742271524) and we will gladly assist you.

ESTIMATED TIME FOR INSTALLATION:

3-4 hours

Please follow the necessary steps to complete your fitment.

BEFORE



AFTER



STEP 1

Remove the following from the vehicle:

- Plastic bumper
- Standard grill.





Wildog Accessories

Installation instruction

STEP 2

- Remove the air Ducting plastics on both sides of the vehicle.







Wildog Accessories

Installation instruction


STEP 3

Remove the following bracket from the vehicles body:

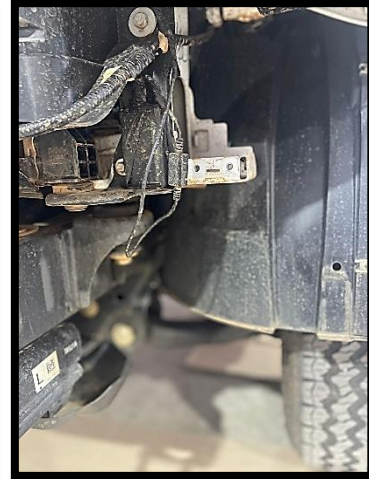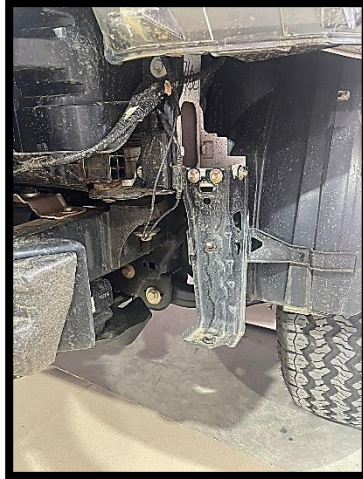

STEP 4

- you will need to re locate the air horn from the wheel cover to the vehicles body as seen below:

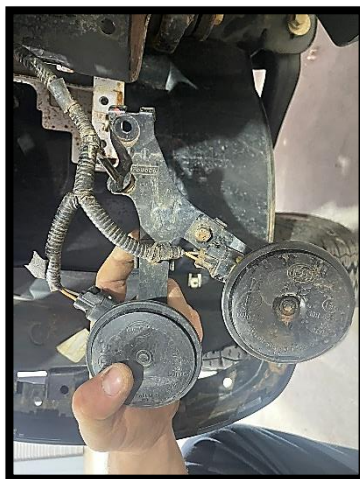






Wildog Accessories

Installation instruction

STEP 5

- When removing the bumper brackets as shown above Tape off all edges with masking tape.
- Spray the area marked with black spray paint.

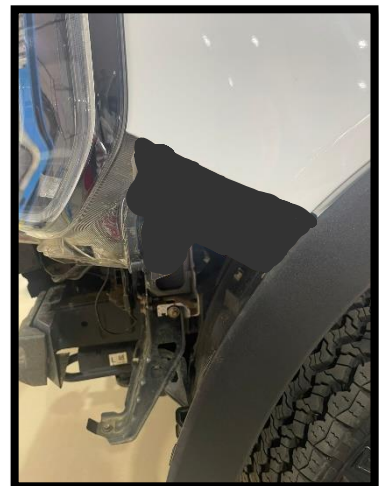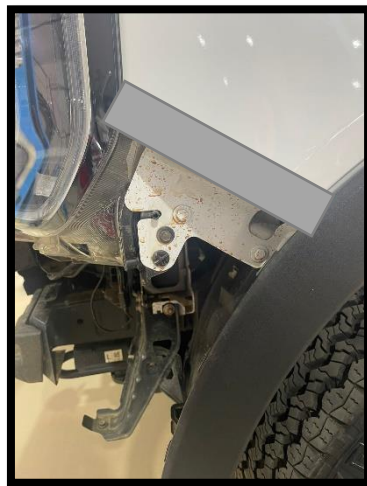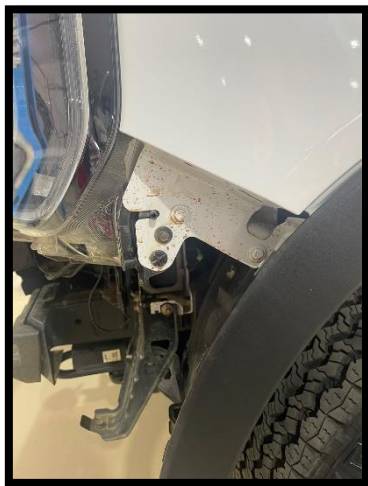

STEP 7

- Remove the indicated bolts behind the chassis flange on both sides of the vehicle.






Wildog Accessories

Installation instruction

STEP 8



All drilled or cut parts should be coated to prevent corrosion.

- Enlarge the holes on the chassis flange to M12 and M10 as seen below:
- Yellow - M12
- Blue - M 10

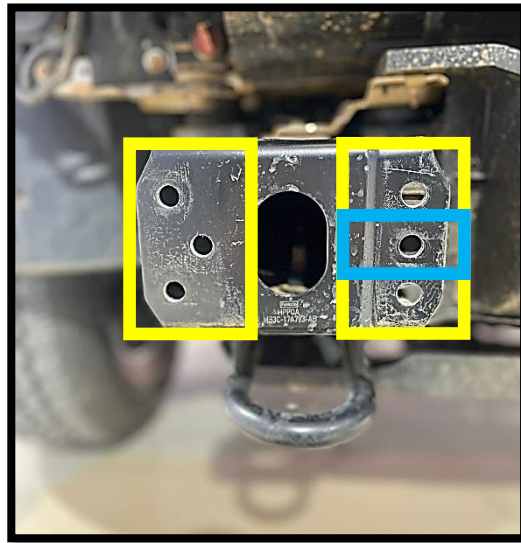

STEP 9

- Torque the chassis mount fasteners to (95 NM).
- Spray and mark each fastener afterwards with a paint marker.
- Ensure that the bumper is not pinching the lights or the fenders when fastening all bolts.
- When the Bumper is aligned drill two (M10) holes for the locking bolts and fasten properly.
- Fasten locking bolts and mark them with a paint marker.
- Ensure that the bumper is not pinching the lights or the fenders when fastening all bolts.

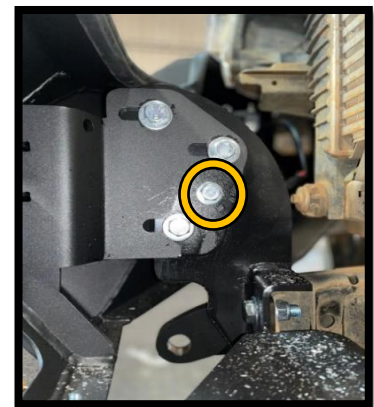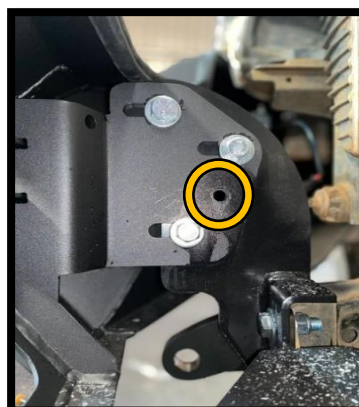



Wildog Accessories

Installation instruction

STEP 10

- Do not cut any wires, or remove the standard OEM light plugs.
- Strip back to small pieces of insulation from the wire and attach the fog light cable to the standard fog light harness.
- Cover and tidy all open wires and loose parts.



STEP 12

- When aligning your bumper ensure that the lights are not pinching against your lights.
- Cut the fender flair in line with the standard fender of the vehicle, place a piece of rubber provided over the edge of the flair.






Wildog Accessories

Installation instruction

STEP 11

- Cut the inner fender liners evenly with the bumper and tuck them in neatly behind the bumper.
- The inner fender liner should be fastened with cable ties for safety.

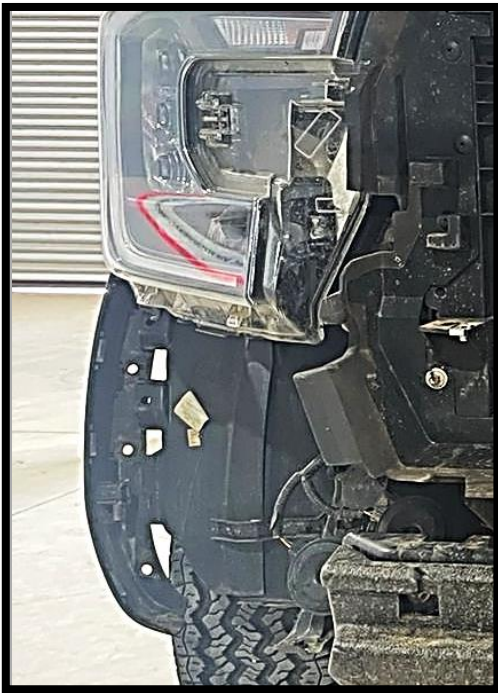

- Tighten the radiator plate to the bottom of the bumper.





Wildog Accessories

Installation instruction

STEP 13

- Tighten your radar box to the space indicated below and ensure all sensors are working before letting the vehicle leave your premises:



STEP 14

- Tighten the Eyelid brackets as indicated below to the side of the bumper and headlight.



- Please ensure that all parts and fasteners are fitted and tightened before letting the vehicle leave your premises.
- Retention all fasteners after 3 months or 500KM of installation to ensure all parts are still fastened and safe for the client.



Wildog Accessories

Installation instruction

Here are too many safe adventures.



Wildog Accessories

Installation instruction

A Warranty form is included with all wildog Accessories orders placed, please ensure that it is completed with every fitment and retention of the bumper if there is no Warranty form completed your 1-year Warranty on the bumper will be voided.



HEAD OFFICE
 5 Sapphire Road
 Klerksoord Akasia
 Pretoria
 Fitment centre
 17 Akwamaryn Street
 Klerksoord Pretoria

www.wildog.co.za
 sales@wildog.co.za
 renier@wildog.co.za

Contact numbers:
 0651006252
 0742271524

Jobcard

Fitment Centre Reference:

Date:

INSTALLATION AND WARRANTY FORM

CUSTOMER DETAIL

Customer Name _____
 Address _____
 Telephone No _____ Cell Number _____ Postal Code _____
 E Mail Address _____

DISTRIBUTOR / FITMENT CENTRE DETAIL

Company Name _____
 Address _____ Contact Person _____
 Telephone No _____ Technician Name _____

VEHICLE DETAIL

Vehicle Make _____ Model _____ Year _____
 Registration No _____ VIN Number _____
 Odo/Speedo Reading _____

ACCESSORIES FRONT

Bumper	Yes	No
Winch	Yes	No
PDC'S	Yes	No
Pdc's	Yes	No
Radar Box	Yes	No
Bolt on towbar	Yes	No
Other	Yes	No

Surface coating _____

ACCESSORIES REAR

Bumper	Yes	No	
Spare wheel carrier	None	Single	Dual

Other _____

ACCESSORIES

Bash plate	Yes	No
Lower c/arms	Yes	No
Transfer c/p	Yes	No
Rock Sliders		
Roof rack		

INSTALLATION DETAIL

Torque checks	
Lock bolts	
Rubbers	
Led lights	

RE-CHECK DETAIL

Torque checks	
Lock bolts	
Rubbers	
Led lights	

COMPONENTS FITTED

Front

Winch plate _____
 Stiffners _____
 Bumper type _____
 Radiator plate _____
 Lights _____
 Resistors _____
 Other _____
 Serial # _____

RETENSIONING

Rear

Spine _____
 Shell _____
 Resistors _____
 Recovery points _____
 Bumper step _____
 Lights _____
 Resistors _____
 Other _____
 Serial # _____

Fitment Centre _____

Technician Name _____

Signature : Fitment Centre (At Re-Check)

CUSTOMER DECLARATION

OTHER

Signature : Customer (At Re-Check)

Copy 1 - Customer copy after 500km
 Re-check
 Copy 2 - Customers Copy at Installation
 Copy 3 - To be returned to WildogAcc
 Copy 4 - Remain in book for Fitment Centre Records

Signature : Customer (At Fitment) Signature : Fitment Centre (At Fitment)

It is essential to complete this card in full. Return to Wildog accessories via email to validate this warranty.
 No warranty form, no claim. Warranty will be void if retention is not done