



# Wildog Accessories

## *Installation instruction*

### **PRODUCT DESCRIPTION:**

- Revo lower Control Arm Protectors and Bash Plate



### PRODUCT SAFETY & LEGAL DISCLAIMER

**• IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.**

- Review the product package and contents prior to beginning the installation.

**Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.**

- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.




# Wildog Accessories

## Installation instruction

### PARTS INCLUDED IN THE LIST:

A	Bashplate	1
B	M8x40 Button heads	6
C	M8x20x2 washers	6
D	Lower control arm protector	2
E	M10x90 Counter sink bolt	2
F	M10x80 Hex bolt	2
G	M10x60 Counter sink bolt	2
H	M10x25x3 washer	6
I	M10 Nyloc Nut	4
J	Spacer 10mm	4
K	M10 Threaded Bush	2

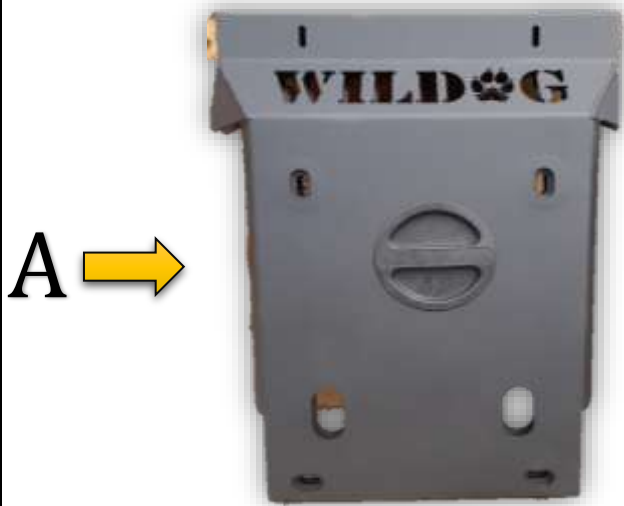



# Wildog Accessories

## *Installation instruction*

**Please insure that all parts and fasteners are accounted for before starting the fitment , if any parts are not included please give us a call on [065 100 62525](tel:06510062525) or [074 227 1524](tel:0742271524) and we will gladly assist you .**

ESTIMATED TIME FOR INSTALLATION:

1-2 hours

*Please follow the necessary steps to complete your fitment.*

### STEP 1

Remove the following from the vehicle:

- Standard Bash Plate



### STEP 2

- Using the supplied M8x40 Button heads line up the front two holes of the bashplate with the front crossmember of the vehicle under the radiator and the remaining four holes will line up with the holes on the other cross members of the chassis





# Wildog Accessories

## *Installation instruction*

### Step 3


- Secure the bashplate by tightening all six bolts firmly.



### Lower Control Arm Protectors:

#### Step 1

- line up the control arm protector with the three holes shown below, hole B will have a hole on the top of the control arm aswell tighten with the M10x80 Hex bolt

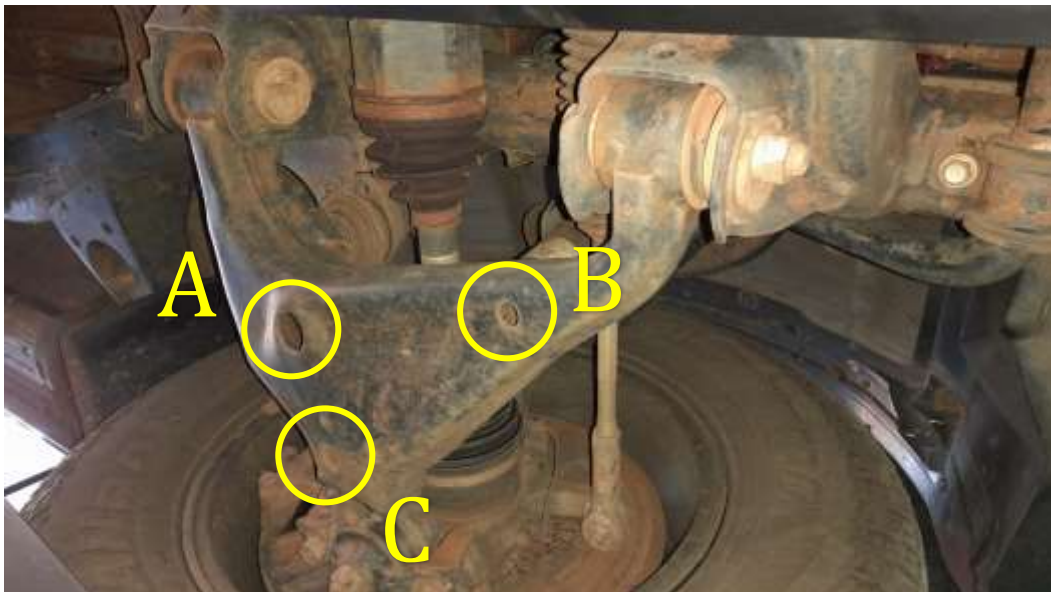

- Hole C also has a hole on the top of the control arm where the M10 threaded bush fits to secure the M10x60 countersink bolt.



# Wildog Accessories

## *Installation instruction*

- Hole A does not have any holes on the top of the control arm which means it needs to be drilled with 10mm drill bit, but beware of the shock mounting on top of the control arm. Before drilling ensure you will have enough space between the shock mount and nut to tighten the m10x90 countersink bolt.
- Lastly tighten all three bolts to secure the control arm protector to the control arm.
- Ensure the wheels have sufficient space to turn and does not touch the control arm protector



- Please ensure that all parts and fasteners are fitted and tightened before letting the vehicle leave your premises.
- Retention all fasteners after 3 months or 500KM of installation to ensure all parts are still fastened and safe for the client.



# Wildog Accessories

## *Installation instruction*

**Here is too many safe adventures.**

A Warranty form is included with all Wildog Accessories orders placed, please insure that it is completed with every fitment and retention of the bumper if there is no Warranty form completed your 1 year Warranty on the bumper will be voided.





# Wildog Accessories

## Installation instruction



**Wildog Accessories (Pty) Ltd**  
 www.wildog.co.za  
 sales@wildog.co.za  
 17 Akwamaryn Street  
 Klerksoord Pretoria

**Contact numbers:**  
 0651006252  
 0742271524

Jobcard

Fitment Centre Reference:

Date:

### INSTALLATION AND WARRANTY FORM

#### CUSTOMER DETAIL

Customer Name \_\_\_\_\_  
 Address \_\_\_\_\_  
 Telephone No \_\_\_\_\_ Cell Number \_\_\_\_\_ Postal Code \_\_\_\_\_  
 E Mail Address \_\_\_\_\_

#### DISTRIBUTOR / FITMENT CENTRE DETAIL

Company Name \_\_\_\_\_  
 Address \_\_\_\_\_ Contact Person \_\_\_\_\_  
 Telephone No \_\_\_\_\_ Technician Name \_\_\_\_\_

#### VEHICLE DETAIL

Vehicle Make \_\_\_\_\_ Model \_\_\_\_\_ Year \_\_\_\_\_  
 Registration No \_\_\_\_\_ VIN Number \_\_\_\_\_  
 Odo/Speedo Reading \_\_\_\_\_

#### ACCESSORIES FRONT

Bumper	Yes	No
Winch	Yes	No
PDC's	Yes	No
Radar box	Yes	No
Bolt on towbar	Yes	No
Other	_____	

Surface coating \_\_\_\_\_

#### ACCESSORIES REAR

Bumper	Yes	No	
Spare wheel carrier	None	Single	Dual
PDC's	Yes	No	
Towball	Yes	No	
Wiring harness	Yes	No	
Other	_____		

Surface coating \_\_\_\_\_

#### ACCESSORIES

Bash plate	Yes	No
Lower c/arms	Yes	No
Transfer c/p	Yes	No
Rock Sliders	Yes	No
Roof rack	Yes	No
Other	_____	

#### INSTALLATION DETAIL

Torque checks	_____	NW	_____
Lock bolts	_____	NW	_____
Rubbers	_____		
Led lights	_____		

#### RE-CHECK DETAIL

Torque checks	_____
Lock bolts	_____
Rubbers	_____
Led lights	_____

Fitment Centre \_\_\_\_\_  
 Technician Name \_\_\_\_\_

#### COMPONENTS FITTED

<b>Front</b>	Winch plate	Yes	No	
	Stiffeners	Yes	No	
	Bumper Shell			
	Radiator plate	Yes	No	
	Lights	Yes	No	
	Resistors	Yes	No	
	Other	_____		
	Serial #	_____		
	<b>Rear</b>	Spine	Yes	No
		Shell	Yes	No
Resistors		Yes	No	
Recovery points		Yes	No	
Bumper step		Yes	No	
Lights		Yes	No	
Towball		Yes	No	
Trailer plug		Yes	No	
Other		_____		
Serial #		_____		

Signature : Fitment Centre (At Re-Check)

#### CUSTOMER DECLARATION

#### OTHER

Signature : Customer (At Re-Check)

**Copy 1** - Customer copy after 500km  
**Copy 2** - Re-check  
**Copy 3** - Customers Copy at Installation  
**Copy 4** - To be returned to Wildog Acc  
 - Remain in book for Fitment Centre Records

Signature : Customer (At Fitment) \_\_\_\_\_ Signature : Fitment Centre (At Fitment) \_\_\_\_\_

It is essential to complete this card in full. Return to Wildog accessories via email to validate this warranty.  
 No warranty form, no claim. Warranty will be void if retention is not done