



Wildog Accessories

INSTALLATION INSTRUCTION

PRODUCT DESCRIPTION:

- Suzuki Jimny Front



PRODUCT SAFETY & LEGAL DISCLAIMER

• IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING. FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.

- Review the product package and contents prior to beginning the installation.

Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.

- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.





Wildog Accessories

INSTALLATION INSTRUCTION

PARTS INCLUDED IN THE LIST:

A	Complete & assembled bumper	1
B	Winch plate	1
C	Chassis Stiffeners	2
D	Tightening bracket	2
E	Radiator plate	1
F	Wheel Covers	2
G	M8 x 70 Hex Bolts	4
H	M8 x 35 Hex Bolts	7
I	M8 x 25 x 2 Washers	25
J	M8 Nyloc Nuts	11
K	M10 x 40 Hex Bolts	8
L	M10 x 25 x 3 Washers	16
M	M10 Nyloc Nuts	8
N	M12 x 40 Hex Bolts	4
O	M12 x 30 x 3 Washers	4
P	Sets of light connectors	2

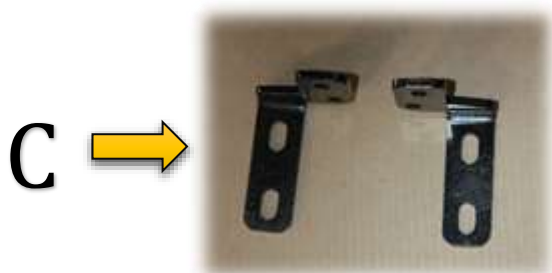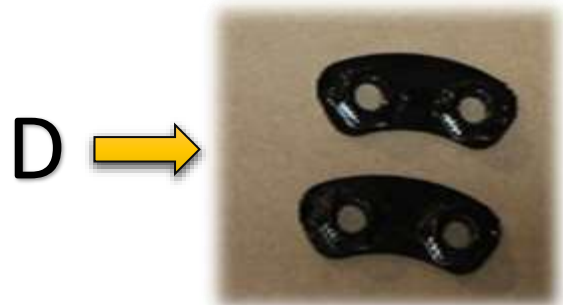



Wildog Accessories

INSTALLATION INSTRUCTION

G →



L →



H →



M →



I →



N →



J →



O →



K →



P →





Wildog Accessories

INSTALLATION INSTRUCTION

Please insure that all parts and fasteners are accounted for before starting the fitment, if any parts are not included please give us a call on [065 100 62525](tel:06510062525) or [074 227 1524](tel:0742271524) and we will gladly assist you.

ESTIMATED TIME FOR INSTALLATION:

3-4 hours

Please follow the necessary steps to complete your fitment.

BEFORE

AFTER



STEP 1

Remove the following from the vehicle:

- Plastic bumper
- Standard grill.






Wildog Accessories

INSTALLATION INSTRUCTION

STEP 2


- The holes indicated on the chassis flange should be enlarged to 12mm.
- All drilled or cut parts should be coated to prevent corrosion.

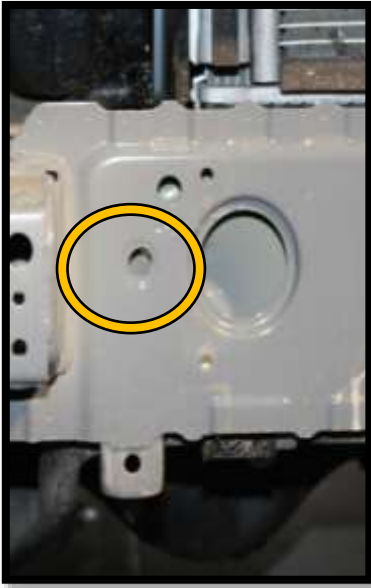

ENLARGE TO
12 MM



- Apply the Tightening bracket on the inside of the chassis mount behind the opening enlarged to 12 mm.

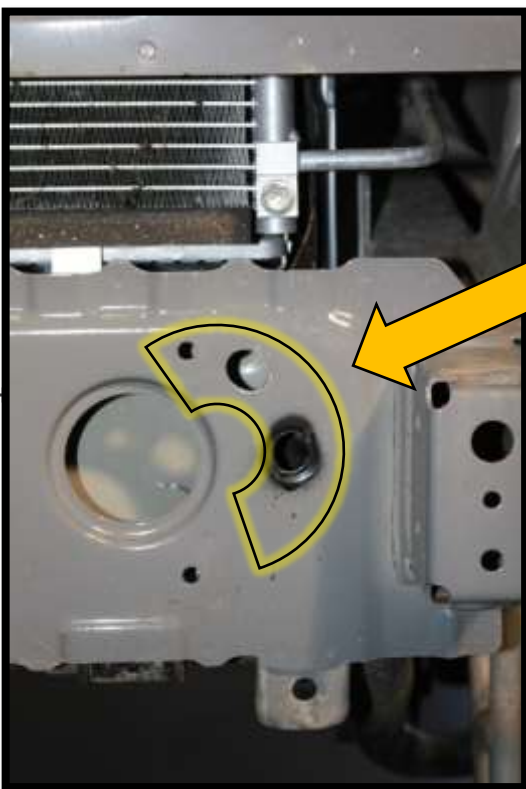




Wildog Accessories

INSTALLATION INSTRUCTION



- Insure that the winch plate's vertical brackets are in alignment and centred with the vehicles chassis before tightening all fasteners.
- Torque the chassis mount fasteners to (95 NM).
- Spray and mark each fastener afterwards.

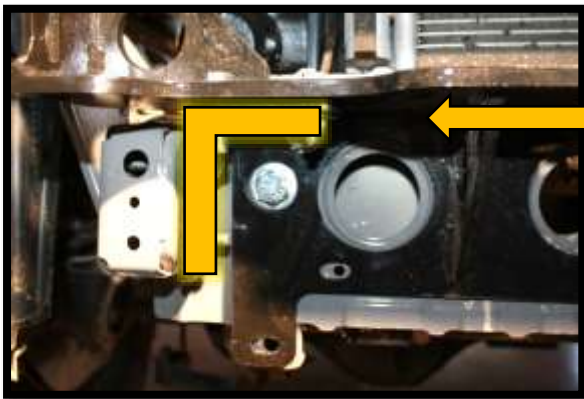

- Bolt the chassis stiffener to the winch plate and tightening bracket.
- Remove the light boxes from the bumper to fasten the bumper to the winch plate.





Wildog Accessories

INSTALLATION INSTRUCTION

- Ensure that the bumper is not pinching the lights or the fenders when fastening all bolts.



- Torque the chassis mount fasteners to (95 NM).
- Spray and mark each fastener afterwards with a paint marker.
- Ensure that the bumper is not pinching the lights or the fenders when fastening all bolts.
- When the Bumper is aligned drill two (M10) holes for the locking bolts and fasten properly.
- Fasten locking bolts and mark them with a paint marker.



- **STEP 3**
- Do not cut any wires, or remove the standard OEM light plugs.
- Strip back to small pieces of insulation from the wire and attach the female lugs to the harness.
- Cover and tidy all open wires and loose parts.
- Connect the male lugs to the supplied fog light and connect to the wiring harness plugs.
- Connect the fog lights to the harness.





Wildog Accessories

INSTALLATION INSTRUCTION

STEP 4

- Fasten the wheel covers to the bottom of the bumper.



- Cut the inner fender liners evenly with the bumper, and tuck them in neatly behind the bumper.
- When looking at the front of the vehicle the left inner fender liner should be fastened with cable ties for safety.



- Please ensure that all parts and fasteners are fitted and tightened before letting the vehicle leave your premises.
- Retention all fasteners after 3 months or 500KM of installation to ensure all parts are still fastened and safe for the client.

Here is too many safe adventures.



Wildog Accessories

INSTALLATION INSTRUCTION

A Warranty form is included with all Wildog Accessories orders placed, please insure that it is completed with every fitment and retention of the bumper if there is no Warranty form completed your 1 year Warranty on the bumper will be voided.



Wildog Accessories (Pty) Ltd

www.wildog.co.za
sales@wildog.co.za
17 Akwamaryn Street
Klerksoord Pretoria

Contact numbers:
0651006252
0742271524

Jobcard

Date:

Fitment Centre Reference:

INSTALLATION AND WARRANTY FORM					
CUSTOMER DETAIL					
Customer Name _____		Address _____		Postal Code _____	
Telephone No _____	Cell Number _____	E Mail Address _____			
DISTRIBUTOR / FITMENT CENTRE DETAIL					
Company Name _____		Address _____		Contact Person _____	
Telephone No _____	Technician Name _____				
VEHICLE DETAIL					
Vehicle Make _____		Model _____		Year _____	
Registration No _____		VIN Number _____		Odo/Speedo Reading _____	
ACCESSORIES FRONT		ACCESSORIES REAR		ACCESSORIES	
Bumper:	Yes No	Bumper	Yes No	Bash plate	Yes No
Winch	Yes No	Spare wheel carrier	None Single Dual	Lower c/arms	Yes No
PDC's	Yes No	PDC's	Yes No	Transfer c/p	Yes No
Radar box	Yes No	Towball	Yes No	Rock Sliders	Yes No
Bolt on towbar	Yes No	Wiring harness	Yes No	Roof rack	Yes No
Other: _____		Other: _____		Other: _____	
Surface coating _____		Surface coating _____			
INSTALLATION DETAIL			RE-CHECK DETAIL		
Torque checks		NW _____	Torque checks		
Lock bolts		NW _____	Lock bolts		
Rubbers			Rubbers		
Led lights			Led lights		
COMPONENTS FITTED			Fitment Centre		
Front	Winch plate	Yes No	Rear	Spine	Yes No
	Stiffners	Yes No		Shell	Yes No
	Bumper Shell			Resistors	Yes No
	Radiator plate	Yes No		Recovery points	Yes No
	Lights	Yes No		Bumper step	Yes No
	Resistors	Yes No		Lights	Yes No
Other: _____		Towball	Yes No	Signature : Fitment Centre (At Re-Check)	
Serial # _____		Trailer plug	Yes No	Signature : Customer (At Re-Check)	
		Other: _____		Signature : Customer (At Re-Check)	
		Serial # _____		Signature : Customer (At Re-Check)	
CUSTOMER DECLARATION		OTHER		Signature : Customer (At Re-Check)	
Signature : Customer (At Fitment)		Signature : Fitment Centre (At Fitment)		Copy 1 - Customer copy after 500km Copy 2 - Re-check Copy 3 - Customers Copy at Installation Copy 4 - To be returned to Wildog Acc - Remain in book for Fitment Centre Records	

It is essential to complete this card in full. Return to Wildog accessories via email to validate this warranty. No warranty form, no claim. Warranty will be void if retention is not done